

Bravo Printer Replacing Paper

Open the door (1) of the service compartment to access the printer.

Push the green button (2) and pull on the tongues (3) to open the printer door and access the paper compartment.

Remove the empty roll and place a new roll of thermal paper so that the paper unrolls from the top over the blue roller.

The roll must have the following dimensions:
Width 57mm (2.24") / Diameter max 45mm (1.77")

Unroll about 15cm (6") of paper and close the compartment door.

Thread the paper in the service compartment door slot and close.

