

Loose these screws (completely loose), run latch test in component test and then start tightening the screws slowly while latch test still running. Latch should run fine after screws fully tight. If latch won't run fine, try above procedure again or try other fix as explained below.



Try to pull the wire, There should be some play (about 1-2mm) between wire and aluminium bracket. If not, see next page.



If no play between wire and aluminium bracket, move back this lock washer around 1-2mm.

Also check if this bracket legs are parallel to each other, If not, squeeze to make it parallel.

