

# Statim 2000/5000

## Rev. 7 PCB

### Water Quality Check

To enter the **User Menu**, turn power switch ON while holding down the Stop button or with power ON hold down the Stop Button and press the wavy lines. (Air Dry on Statim 2000/Heavy Duty Unwrapped on the Statim 5000).

Display should be similar to one shown below:

```
>Time/Date Setup
Language Setup
```

Press the unwrapped button 3 times; the display should be similar to one shown below:

```
>Water Quality
Last Printout
```

Press the rubber and plastics button to select Water Quality; the display should be similar to one shown below:

```
>Water Quality
CD=x.xuS/NNN/y.yppm
```

#### Screen Representation

x.x	Water conductivity in uS (micro-Siemens)
NNN	Water conductivity in ADC (Analog to Digital converter) counts (0...255)
y.y	Water quality in ppm (parts per million)

#### Keypad:

Rubber and Plastics	Return to main menu
Stop	Exit menu to normal mode of operation

**Note: Water conductivity should be below 10uS.**