

Statim G4

Maintenance Required

To turn off, change or reset the maintenance notification go to the Technician menu and select maintenance. To turn off the maintenance notification, select notification On/Off and use the up or down arrow to select on or off. The default selection is off. To change the notification schedule, select schedule then cycles or months (default 2000 cycles & 12 months). To reset the maintenance message, select OK or Remind Me Later when the message appears. You can also reset the message by selecting Reset in the maintenance options.

