

# Statim G4 Repeater Mode

To place the Statim G4 in Repeater Mode so it will run continuous cycles follow the instructions below:



Press and release the back arrow until the home screen is visible. Select the cycle of your choice and the Statim G4 will run continuously until it runs out of water or the Stop button is pressed

**Note: You must go back to the Repeater Mode menu and turn the Repeater Mode OFF to run normal cycles.**